

# UD384 Driver update Install instruction

Before remove, Please make sure that your UD384 is detected by your computer and no “!” mark . (Check the Device control manager)



1. Use the latest driver to remove older UD384 driver first.



## 2. Select KingRex UD384



## 3. Select Next




4. Check the result, then push next.



5. Push "Finish" to complete the remove process.




6. Since the computer will find for the driver for UD384, please wait for unit you see the following image on your computer

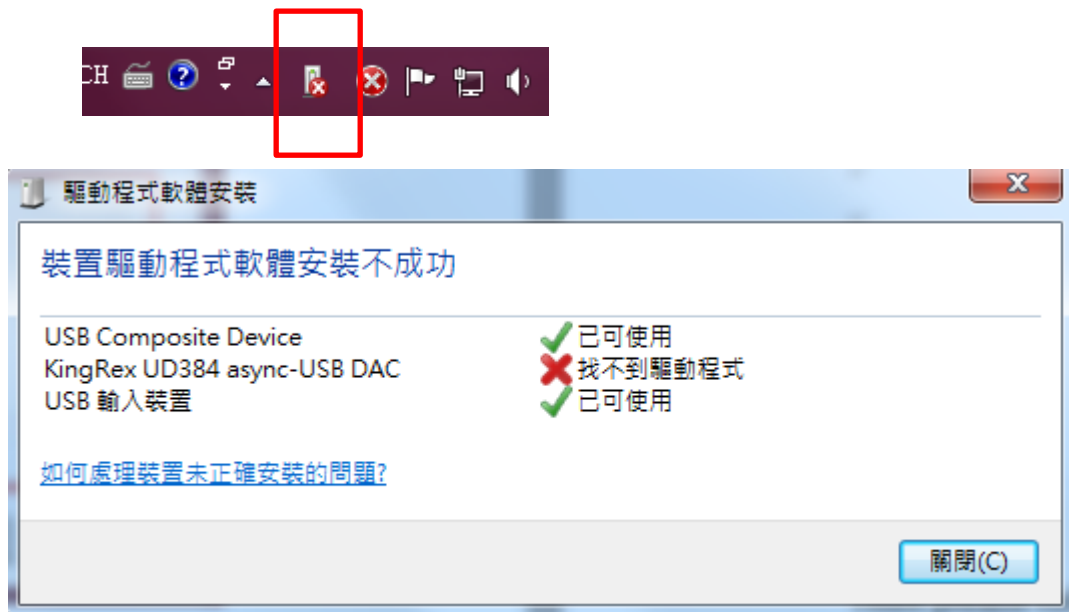

Then the remove process is succeed.

*Remember to replug USB and Power adaptor of UD384 before* you follow the standard process to start to install the latest driver.

7. Before your update, please make sure that your UD384 is detected by the computer.

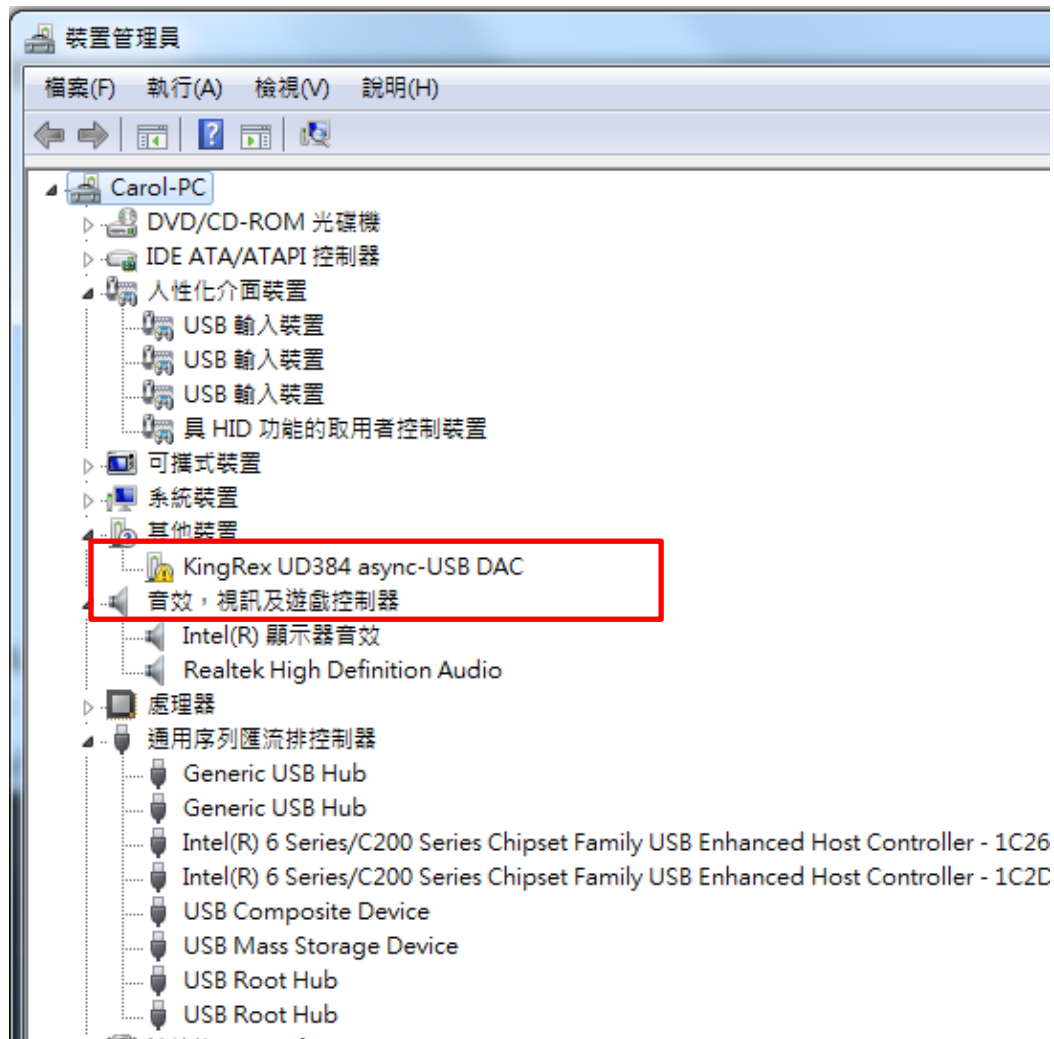

8. Follow the standard process to install UD384 latest driver.



## 9. Press Next





10.

Presses to finish install process. Now the UD384 is built in the latest driver now.

